### Model **AFS-222**

#### AIR PRESSURE SENSING SWITCH WITH ADJUSTABLE SET POINT RANGE

#### APPLICATION

Model AFS-222 Air Pressure Sensing Switch is a general purpose proving switch designed for HVAC and Energy Management applications. It may be used to sense positive, negative, or differential air pressure.

#### **GENERAL DESCRIPTION & OPERATION**


The plated housing contains a diaphragm, a calibration spring and a snap-acting SPDT switch. The sample connections located on each side of the diaphragm accept 1/4" OD metallic tubing via the integral compression ferrule and nut.

An enclosure cover guards against accidental contact with the live switch terminal screws and the set point adjusting screw. The enclosure cover will accept a 1/2" conduit connection.

#### **MOUNTING (SEE FIGURE 1)**

Select a mounting location which is free from vibration. The AFS-222 must be mounted with the diaphragm in any vertical plane in order to obtain the lowest specified operating. For sample lines of up to 10 feet, 1/4" OD set point. Avoid mounting with the sample line connections in the "up" position. Surface mount via the two 3/16" diameter holes in the integral mounting bracket. The mounting holes are 3-7/8" apart.

The AFS-222 is designed to accept firm-wall Locate the sampling probe a minimum of sample lines of 1/4" OD tubing by means of

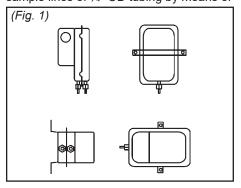



#### AIR SAMPLING CONNECTION (SEE FIGURE 2)

ferrule and nut compression connections. tubing is acceptable. For lines up to 20 feet, use 1/4" ID tubing. For lines up to 60 feet, use 1/2" ID tubing. A 1/4" OD adapter, suitable for slip-on flexible tubing is available: order part number 18311.

1.5 duct diameters downstream from the air source. Install the sampling probe as close to the center of the airstream as possible. Refer to Figure 2 to identify the high pressure inlet (H) and the low pressure inlet (L). Select one of the five application options listed below, and connect the sample lines as recommended.


POSITIVE PRESSURE ONLY: Connect the sample line to inlet H; inlet L remains open to the atmosphere.


**NEGATIVE PRESSURE ONLY: Connect** the sample line to inlet L; inlet H remains open to the atmosphere.

TWO NEGATIVE SAMPLES: Connect the higher negative sample to inlet L. Connect the lower negative sample to inlet H.

TWO POSITIVE SAMPLES: Connect the higher positive sample to inlet H. Connect the lower positive sample to inlet L.

ONE POSITIVE AND ONE NEGATIVE SAMPLE: Connect the positive sample to inlet H. Connect the negative sample to inlet L.

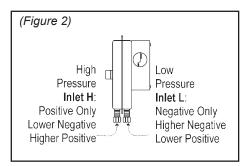

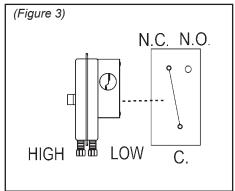

# (Figure 4) To prove excessive air flow or pressure: ONO ALARM ONC CONTROL To prove insufficient air flow or pressure: ONO CONTROL ONO CONTROL ONO CONTROL ONO ALARM


## ELECTRICAL CONNECTIONS (SEE FIGURE 3)

Before pressure is applied to the diaphragm, the switch contacts will be in the normally closed (NC) position. The snap switch has screw top terminals with cup washers. Wire alarm and control applications as shown in Figure 4.

#### FIELD ADJUSTMENT

The adjustment range of an AFS-222 Air Switch is  $0.05 \pm .02$ " w.c. to 12.0" w.c. To adjust the set point, t urn the adjusting screw counterclockwise until motion has stopped. Next, turn the adjusting screw 4 complete turns in a clockwise direction to engage the spring. From this point, the next ten turns will be used for the actual calibration. Each full turn represents approximately 1.2" w.c.

**Please note:** To properly calibrate an air switch, a digital manometer or other measuring device should be used to confirm the actual set point.

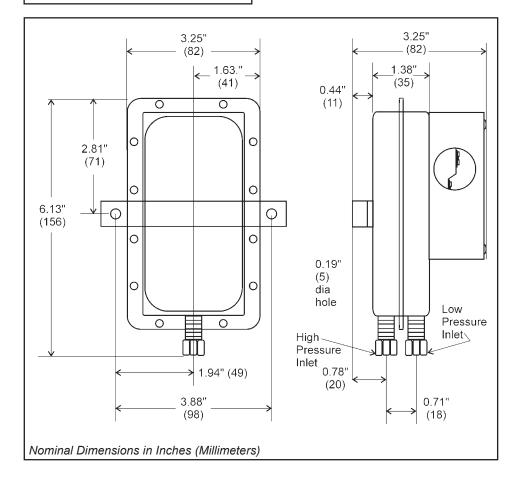

#### **SPECIFICATIONS**

# MODEL AFS-222 AIR PRESSURE SENSING SWITCH WITH ADJUSTABLE SET POINT RANGE

#### **Mounting Position:**

Mount with the diaphragm in any vertical plane.

#### **Set Point Range:**

 $0.05 \pm 0.02$ " w.c. to 12.0"w.c.

Field Adjustable "Operate Range": 0.07"w.c. to 12.0" w.c.

Field Adjustable "Release Range": 0.04"w.c. to 11.2" w.c.

#### **Approximate Switching Differential:**

Progressive, increasing from  $0.02 \pm 0.01$ "w.c. at minimum set point to approximately 0.8 " w.c. at maximum set point.

#### **Measured Media:**

Air, or combustion by-products that will not degrade silicone.

#### **Maximum Pressure:**

½ psi (0.03 bar).

#### **Operating Temperature Range:**

-40F to 180F (-40 to 82C).

#### Life:

100,000 cycles minimum at 1/2 psi maximum pressure each cycle and at maximum rated electrical load.

#### **Electrical Rating:**

300 VA pilot duty at 115 to 277 VAC, 15 amps noninductive to 277 VAC, 60Hz.

Contact Arrangement: SPDT.

#### **Electrical Connections:**

Screw-type terminals with cup washers.

#### **Conduit Opening:**

7/8" diameter opening accepts ½" conduit.

#### **Sample Line Connectors:**

Male, externally threaded 7/16" 24 UNS 2A thread, complete with nuts and self-aligning ferrules.

#### **Sample Line Connections:**

Connectors will accept 1/4" OD rigid or semi-rigid tubing.

Approvals: UL, FM, CSA. Shipping Weight: 1.2 lbs.

#### **Accessories:**

- P/N 18311 Slip-on ¼" OD Tubing Adapter, suitable for slipping on flexible plastic tubing.
- Sample line probes.
- · Orifice plugs (pulsation dampers).